

## Urban Exchange Dishwasher Lock Mode

If your dishwasher is displaying a green light and will not turn on.... It has been put in lock mode accidentally. The start-up code for these dishwashers will be the following: hold down the heat/dry button for 3-5 seconds until the green light goes off and the dishwasher should go out of lock mode. The dishwasher should now be ready to resume normal functions. If this does not solve the issue, please turn in a workorder.